



Step 1


- Remove the door panel, speaker and any other fittings such as door handles and latches. Be careful not to break any door trim fittings.
- Make notes or take photographs of how parts fit so re-assembly is made easier.
- Keep all screws and fasteners together in a container.



Step 2

- Thoroughly clean the surface to which the Q-Mat is to be applied. Installation must be carried out the surface is dry and contaminant free.
- Cut the Q-Mat to the desired size and shape with a sharp blade knife or scissors.

TIP: the moisture barrier can be used as a template and to mark where door handles and wires are located.

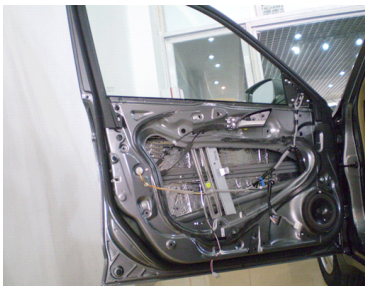

Step 3 Outer door panel

- Outer door panels are best covered by vertical strips ensuring all main panels are covered.
- Remove the backing paper and press the Q-Mat firmly to ensure the material is sticks firmly onto the surface.
- A heat gun can be used to make the Q-Mat more pliable and a roller to iron out any wrinkles.



Step 4 Inner door panel

- Inner door panels are best covered by full sheets
- Mark and cut for door handles, speakers, wiring, etc
- By using the original moisture barrier as the template, trim the edges of the Q-Mat so it doesn't protrude beyond the door trim.



Step 5

- Re-fit the speaker.
- Connect all cables, door latches, etc.
- Test the opening and closing of the door and window before refitting the door panel.