

Step 1




- Remove the door panel, speaker and any other fittings such as door handles and latches. Be careful not to break any door trim fittings.
- Make notes or take photographs of how parts fit so re-assembly is made easier.
- Keep all screws and fasteners together in a container.

Step 2



- Thoroughly clean the surface to which the Q-Mat is to be applied.
- Installation must be carried out the surface is dry and contaminant free.

Step 3

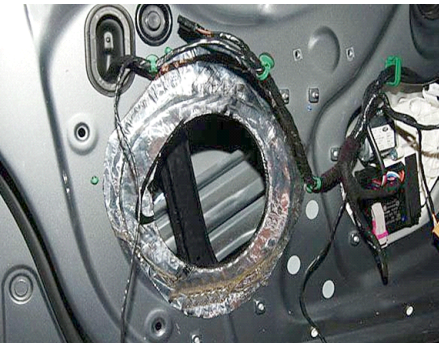

- Cut the Q-Mat to the desired size and shape with a sharp blade knife or scissors.
- Remove the backing paper and press the Q-Mat firmly on the speaker panel to ensure the material is sticks firmly onto the surface.

Step 4



- Re-fit the speaker.
- Connect all cables, door latches, etc.
- Refit the door panel.